


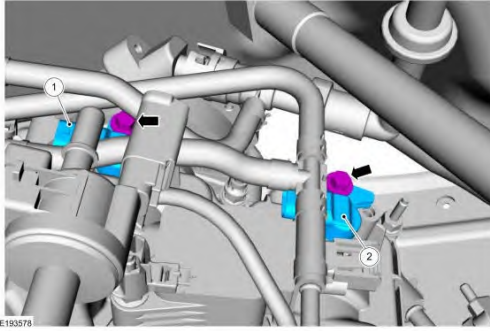

REMOVAL AND INSTALLATION > CAMSHAFT POSITION (CMP) SENSOR > INSTALLATION



NOTE: Before installation, lubricate the CMP sensor O-ring seal with clean engine oil.

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > CATALYST MONITOR SENSOR

Special Tool(s) / General Equipment

 E172696	303-476 (T94P-9472-A) Socket, Exhaust Gas Oxygen Sensor TKIT-1994-F TKIT-1994-FLM/FM TKIT-1994-LM/M
--	---

Materials

Name	Specification
High Temperature Nickel Anti-Seize Lubricant XL-2	-
Penetrating and Lock Lubricant XL-1	-

REMOVAL AND INSTALLATION > CATALYST MONITOR SENSOR > REMOVAL

All sensors

1.