


All sensors

4.

If equipped, install the underbody shield.

Torque

: 71 lb.in (8 Nm)

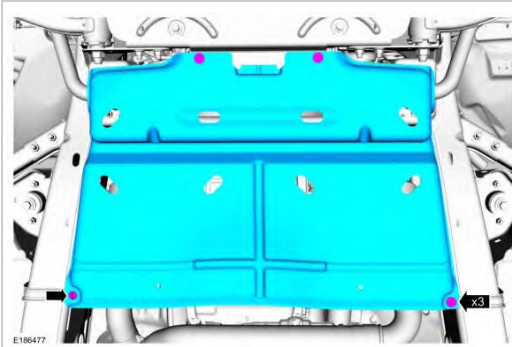

REMOVAL AND INSTALLATION > CRANKSHAFT POSITION (CKP) SENSOR > REMOVAL




NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the RH fender splash shield. REFER to: Fender Splash Shield .

2.

Disconnect the CKP sensor electrical connector.

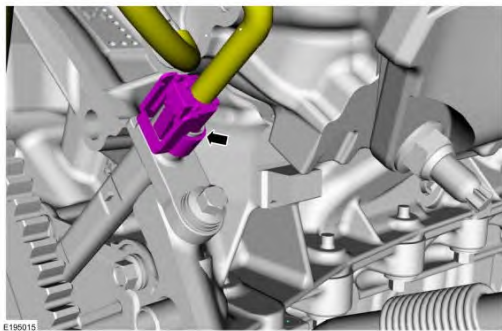

3.

Remove the retainer and CKP sensor.

Torque