


: 89 lb.in (10 Nm)

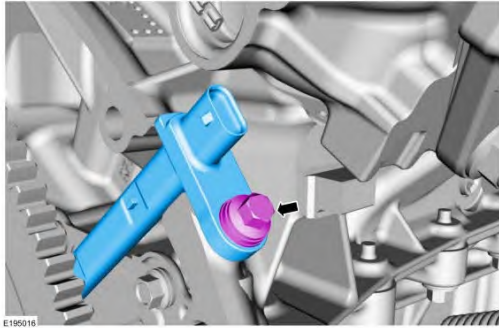

REMOVAL AND INSTALLATION > CRANKSHAFT POSITION (CKP) SENSOR > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Using the scan tool, perform the Misfire Monitor Neutral Profile Correction procedure, following the on-screen instructions.

REMOVAL AND INSTALLATION > CYLINDER HEAD TEMPERATURE 2 (CHT2) SENSOR > REMOVAL

1.

Remove the nuts and the engine appearance cover.

Torque

: 42 lb.in (4.8 Nm)



2.