


Disconnect the CHT2 sensor electrical connector.

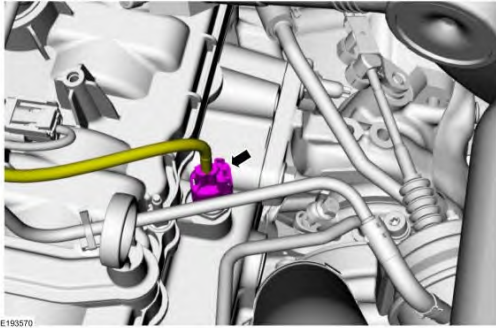

3.




NOTE: Do not reuse the CHT2 sensor, install a new sensor.

Remove and discard the CHT2 sensor.

Torque

: 106 lb.in (12 Nm)

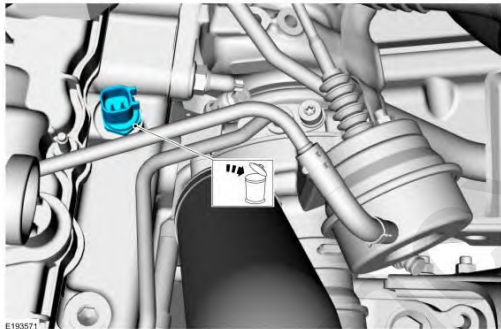

REMOVAL AND INSTALLATION > CYLINDER HEAD TEMPERATURE 2 (CHT2) SENSOR > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > ENGINE COOLANT TEMPERATURE (ECT) SENSOR > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.