

REMOVAL AND INSTALLATION > ENGINE OIL PRESSURE (EOP) SENSOR > INSTALLATION



NOTE: If the EOP sensor is to be reused, apply thread sealant.

1.

To install, reverse the removal procedure.

Material

: Thread Sealant with PTFE / TA-24-B (WSK-M2G350-A2)

REMOVAL AND INSTALLATION > FUEL RAIL PRESSURE (FRP) SENSOR

Materials

Name	Specification
Motorcraft® SAE 5W-30 Premium Synthetic Blend Motor Oil XO-5W30-QSP	WSS-M2C946-A

REMOVAL AND INSTALLATION > FUEL RAIL PRESSURE (FRP) SENSOR > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the LH fuel rail. REFER to: FUEL RAIL .

2.

Disconnect the electrical connector, remove the FRP sensor.

Material

: Motorcraft® SAE 5W-30 Premium Synthetic Blend Motor Oil / XO-5W30-QSP (WSS-M2C946-A)

Torque:

Stage 1: 44 lb.in (5 Nm)

Stage 2: 19°