


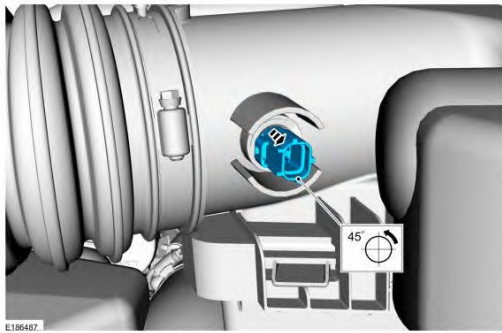

REMOVAL AND INSTALLATION > INTAKE AIR TEMPERATURE (IAT) SENSOR > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > KNOCK SENSOR (KS) > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.


Remove the coolant outlet connector. REFER to: COOLANT OUTLET CONNECTOR .

2.

Disconnect the ECT sensor connector, remove retainers and the KS.

Torque

: 97 lb.in (11 Nm)

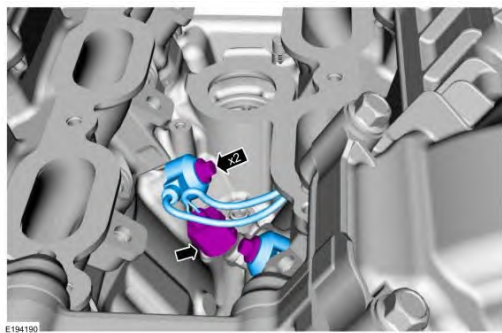

REMOVAL AND INSTALLATION > KNOCK SENSOR (KS) > INSTALLATION