

> INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > OIL PRESSURE CONTROL SOLENOID > REMOVAL




NOTE: Removal steps in this procedure may contain installation details.

1.

With the vehicle in NEUTRAL, position it on a hoist. REFER to: Jacking and Lifting - Overview .

2.

Disconnect the oil pressure control solenoid electrical connector.

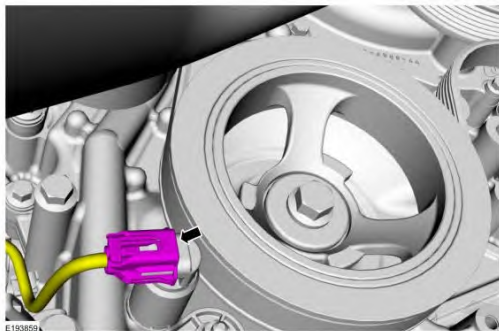

3.

Remove the retainer and the oil pressure control solenoid.

Torque

: 97 lb.in (11 Nm)

