


Torque

: 27 lb.in (3 Nm)

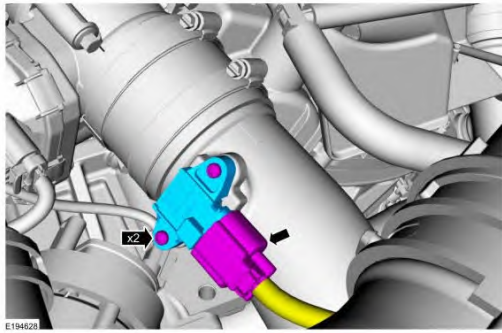

REMOVAL AND INSTALLATION > TURBOCHARGER BOOST PRESSURE (TCBP) AND CHARGER AIR COOLER TEMPERATURE (CACT) SENSOR > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > TURBOCHARGER BYPASS VALVE > REMOVAL



NOTE: Whenever turbocharger air intake system components are removed, always cover open ports to protect from debris. It is important that no foreign material enter the system. The turbocharger compressor vanes are susceptible to damage from even small particles. All components should be inspected and cleaned, if necessary, prior to installation or reassembly.



NOTE: Removal steps in this procedure may contain installation details.

1.

With the vehicle in NEUTRAL, position it on a hoist. REFER to: Jacking and Lifting - Overview .

2.

If equipped, remove the underbody shield.