

DDM DTC Chart

DTC	Description	Action
B1D06:11	Left Turn Indicator: Circuit Short To Ground	GO to PINPOINT TEST B : ONE TURN SIGNAL LAMP IS INOPERATIVE OR ALWAYS ON
For other DDM Diagnostic Trouble Codes (DTCs)	-	REFER to: Locks, Latches and Entry Systems .

DIAGNOSIS AND TESTING > TURN SIGNAL AND HAZARD LAMPS > DTC CHART: PASSENGER DOOR MODULE (PDM)

Diagnostics in this article assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: Diagnostic Methods .

PDM DTC Chart

DTC	Description	Action
B1D07:11	Right Turn Indicator: Circuit Short To Ground	GO to PINPOINT TEST B : ONE TURN SIGNAL LAMP IS INOPERATIVE OR ALWAYS ON
For other PDM Diagnostic Trouble Codes (DTCs)	-	REFER to: Locks, Latches and Entry Systems .

DIAGNOSIS AND TESTING > TURN SIGNAL AND HAZARD LAMPS > DTC CHART: STEERING COLUMN CONTROL MODULE (SCCM)

Diagnostics in this article assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: Diagnostic Methods .

SCCM DTC Chart

DTC	Description	Action
B1D36:09	Turn Indicator Switch: Component Failure	INSTALL a new LH steering column multifunction switch. REFER to: Steering Column Multifunction Switch LH . CLEAR the Diagnostic Trouble Codes (DTCs). Run the SCCM self-test. If the DTC returns, INSTALL a new SCCM. REFER to: Steering Column Control Module (SCCM) .