

For other SCCM Diagnostic Trouble Codes (DTCs)	-	REFER to: Steering Wheel and Column Electrical Components .
--	---	---

DIAGNOSIS AND TESTING > TURN SIGNAL AND HAZARD LAMPS > SYMPTOM CHART(S)

Symptom Chart: Turn Signal and Hazard Lamps

Diagnostics in this article assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: Diagnostic Methods .

Symptom Chart

Condition	Possible Sources	Actions
A module does not respond to the diagnostic scan tool	Fuse Wiring, terminals or connectors Module	REFER to: Communications Network .
The turn signal function is inoperative or always on	Refer to the Pinpoint Test	GO to PINPOINT TEST A : THE TURN SIGNAL FUNCTION IS INOPERATIVE OR ALWAYS ON
One turn signal lamp is inoperative or always on	Refer to the Pinpoint Test	GO to PINPOINT TEST B : ONE TURN SIGNAL LAMP IS INOPERATIVE OR ALWAYS ON
The hazard lamp function is inoperative or always on	Refer to the Pinpoint Test	GO to PINPOINT TEST C : THE HAZARD LAMP FUNCTION IS INOPERATIVE OR ALWAYS ON
The turn signal indicator flashes fast when no turn signal lamps are inoperative or does not flash fast when a turn signal lamp is inoperative - LED headlamps or rear lamps	Refer to the Pinpoint Test	GO to PINPOINT TEST D : THE TURN SIGNAL INDICATOR FLASHES FAST WHEN NO TURN SIGNAL LAMPS ARE INOPERATIVE OR DOES NOT FLASH FAST WHEN A TURN SIGNAL LAMP IS INOPERATIVE - LED (LIGHT EMITTING DIODE) HEADLAMPS OR REAR LAMPS .

DIAGNOSIS AND TESTING > TURN SIGNAL AND HAZARD LAMPS > PINPOINT TESTS > PINPOINT TEST A : THE TURN SIGNAL FUNCTION IS INOPERATIVE OR ALWAYS ON

Refer to Turn Signal/Stop/Hazard Lamps for schematic and connector information.

Normal Operation and Fault Conditions

REFER to: Exterior Lighting - System Operation and Component Description .