

6.

Install the following items:

Refer to: Turbocharger LH .

Refer to: Camshaft LH .

Refer to: Intake Manifold .

7.

Connect the battery ground cable. Refer to: Battery Disconnect and Connect .

REMOVAL AND INSTALLATION > CYLINDER HEAD RH

Special Tool(s) / General Equipment

Hose Clamp Remover/Installer

REMOVAL AND INSTALLATION > CYLINDER HEAD RH > REMOVAL



NOTE: During engine repair procedures, cleanliness is extremely important. Any foreign material, including any material created while cleaning gasket surfaces, that enters the oil passages, coolant passages or the oil pan, can cause engine failure.

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Release the fuel system pressure. Refer to: FUEL SYSTEM PRESSURE RELEASE

3.

Disconnect the battery ground cable. Refer to: Battery Disconnect and Connect .

4.

Remove the following items:

Refer to: Intake Manifold .

Refer to: Camshaft RH .

Refer to: Turbocharger RH .

5.