

Name	Specification
Motorcraft ® SAE 5W-30 Premium Synthetic Blend Motor Oil XO-5W30-QSP	WSS-M2C946-A

DISASSEMBLY AND ASSEMBLY OF SUBASSEMBLIES > PISTON > DISASSEMBLY



NOTE: The RH and LH pistons are similar in appearance but differ in design specifications. The pistons must be installed in the correct cylinder bank or serious damage to the engine will occur.

1.


Remove and discard the piston rings.



2.

Remove and discard the piston pin retainers.


Remove the piston pin.

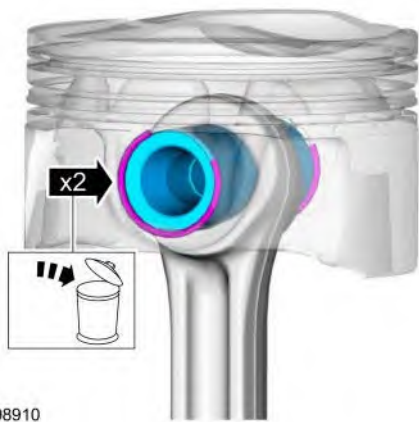

3.

 **NOTE:** If the piston and connecting rod are to be reinstalled, they must be assembled in the same orientation. Mark the piston orientation to the connecting rod for reassembly.

Separate the piston from the connecting rod.

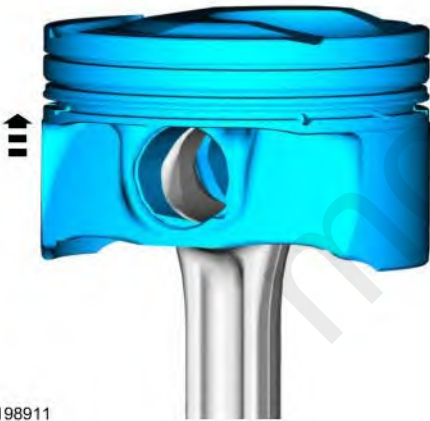

4.

Clean and inspect the piston and connecting rod. Refer to: Piston Inspection .