

REMOVAL AND INSTALLATION > ENGINE MOUNT LH

Special Tool(s) / General Equipment

	303-1245 Engine Lift Eye TKIT-2006UF-FLM TKIT-2006UF-ROW
 ST3101-A	303-1454 Engine Spreader Bar TKIT-2009A-FLM
	303-F070 Support Bar, Engine TKIT-1999A-F/LT TKIT-1999A-FM/FLM
Vehicle/Axle Stands	

REMOVAL AND INSTALLATION > ENGINE MOUNT LH > REMOVAL

4x2/4x4

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.



NOTE: RH shown, LH similar.

Index-mark the hood hinge location to aid in hood installation.