


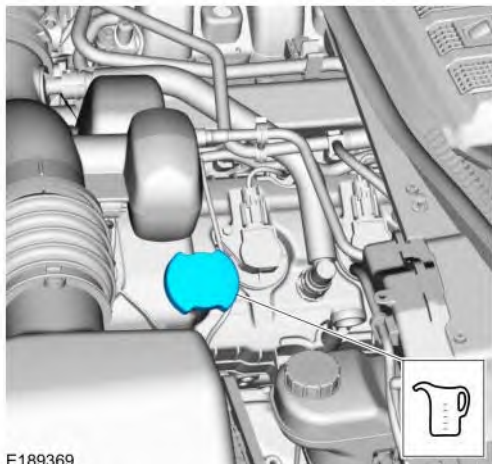

REMOVAL AND INSTALLATION > OIL PRESSURE SWITCH


Materials

Name	Specification
Thread Sealant with PTFE TA-24-B	WSK-M2G350-A2

REMOVAL AND INSTALLATION > OIL PRESSURE SWITCH > REMOVAL

1.

Disconnect the oil pressure switch electrical connector.

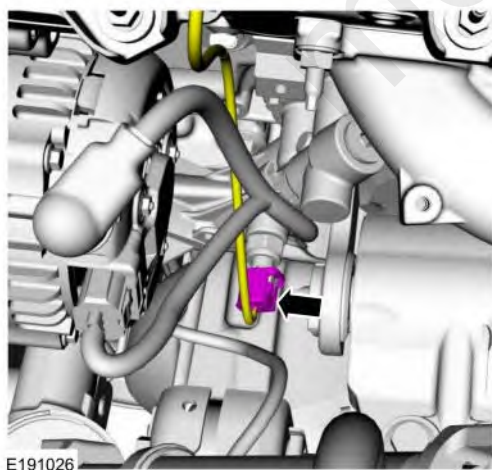

2.

Remove the oil pressure switch.

Torque