



Item	Part Number	Description
1	6110	Piston and connecting rod assembly (6 required)
2	6211	Connecting rod upper bearing (6 required)
3	6211	Connecting rod lower bearing (6 required)
4	6010	Cylinder block
5	6K868	Piston oil cool valve (6 required)
6	6333	Cylinder block crankshaft main bearing (4 required)
7	6A341	Crankshaft upper thrust outer washer
8	6K302	Crankshaft lower thrust washer
9	6A341	Crankshaft upper thrust inner washer
10	6303	Crankshaft
11	6A338	Lower crankshaft main bearings (4 required)
12	-	Lower crankshaft main bearing caps (4 required) (part of 6010)
13	6C364	Main bearing cap support brace

DIAGNOSIS AND TESTING > ENGINE

1.