

33.

Connect the battery ground cable. Refer to: Battery Disconnect and Connect .

REMOVAL AND INSTALLATION > OIL PRESSURE SWITCH

Materials

Name	Specification
Thread Sealant with PTFE TA-24-B	WSK-M2G350-A2

REMOVAL AND INSTALLATION > OIL PRESSURE SWITCH > REMOVAL

4x2


1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Remove the pin-type retainers.


Remove the bolts and the underbody shield.

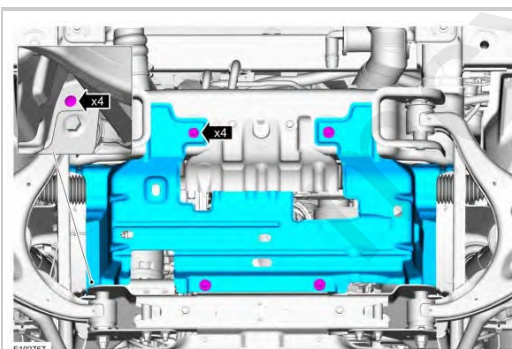

4x4

3.

Remove the engine appearance cover.

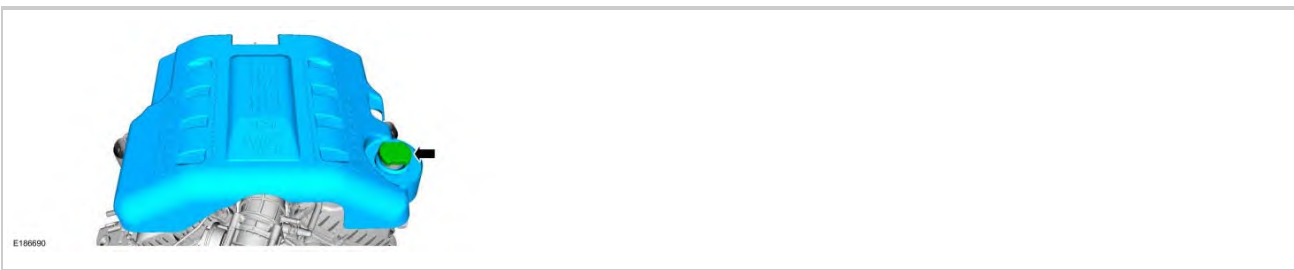

4.

Remove the air cleaner outlet pipe. Refer to: AIR CLEANER OUTLET PIPE .

5.

1.

Disconnect the PCV pressure sensor electrical connector.

2.

Remove the PCV tube. Refer to: QUICK RELEASE COUPLING .




6.

Disconnect the quick connect couplings and the turbocharger bypass tube. Refer to: QUICK RELEASE COUPLING .




7.

Loosen the clamp at the turbocharger. Disconnect the turbocharger inlet tube from the grommet and remove the turbocharger inlet tube.

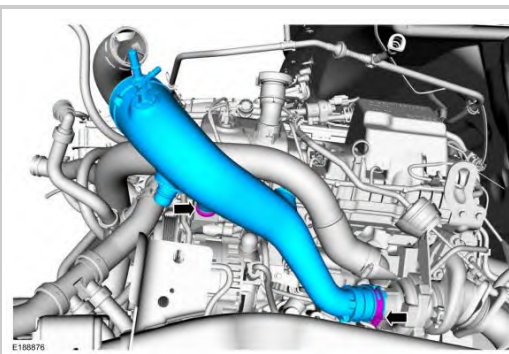

8.

If equipped, disconnect the block heater electrical connector and wire retainer.

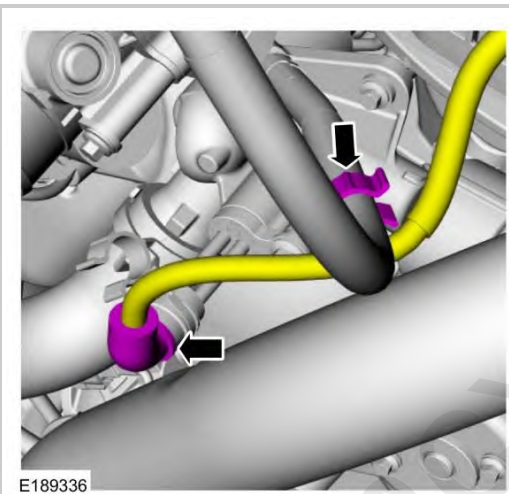

9.

Loosen the clamps. Disconnect the turbocharger outlet tube from the bracket grommet and remove the turbocharger outlet tube.

