

## REMOVAL AND INSTALLATION > HAZARD FLASHER SWITCH > REMOVAL

1.

Remove the FCIM. Refer to: Front Controls Interface Module (FCIM) .

2.

Release the tabs and remove the hazard flasher switch.



## REMOVAL AND INSTALLATION > HAZARD FLASHER SWITCH > INSTALLATION

1.

To install, reverse the removal procedure.

## REMOVAL AND INSTALLATION > HEADLAMP ASSEMBLY > REMOVAL

### All vehicles

1.

Raise the vehicle on a hoist. Refer to: Jacking and Lifting - Overview .

### Vehicles without fender mouldings

2.

Remove the headlamp trim panel screws and push pin.