


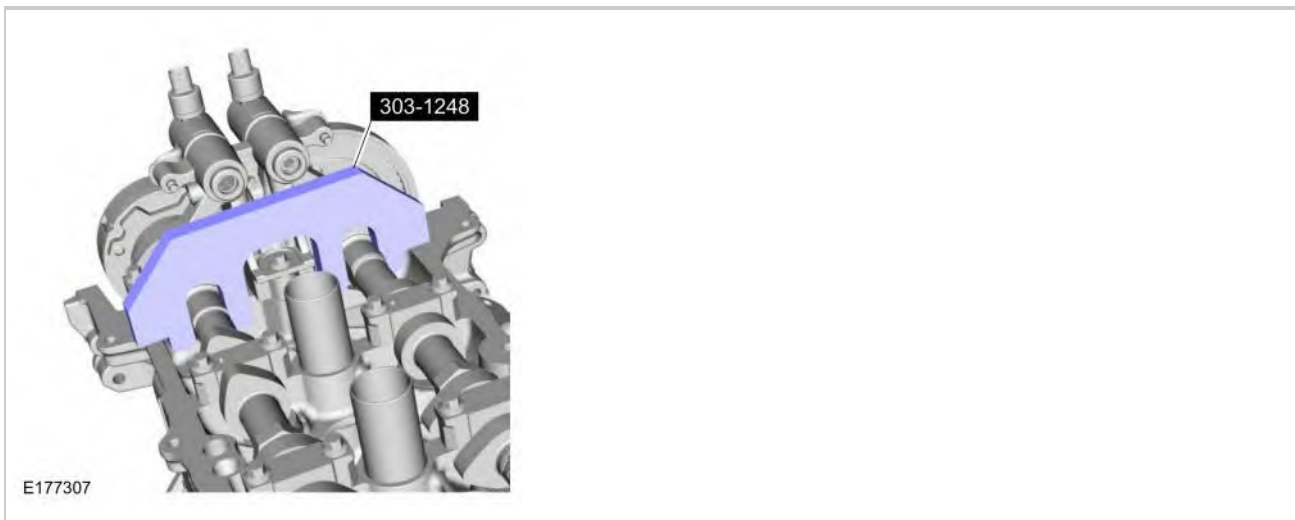


11.

Install the LH oil tube and the bolts.

Torque

: Stage 1: 71 lb.in (8 Nm) Stage 2: 45 °

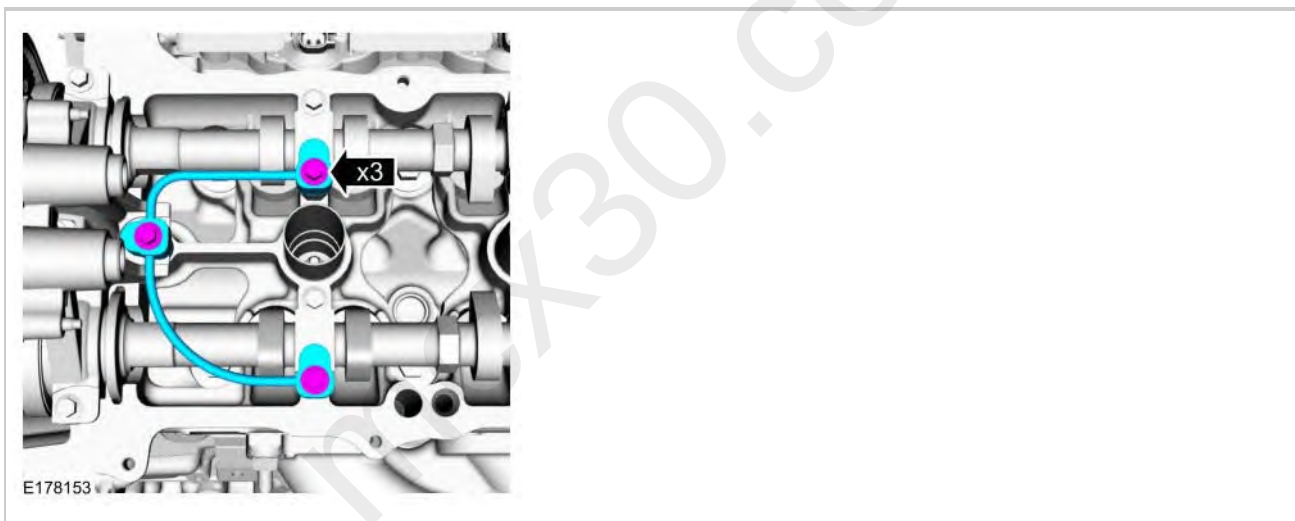

12.

Install the engine front cover. Refer to: Engine Front Cover .

REMOVAL AND INSTALLATION > VALVE COVER LH

Special Tool(s) / General Equipment