


DISASSEMBLY AND ASSEMBLY OF SUBASSEMBLIES > PISTON > DISASSEMBLY

1.

Remove the piston rings and discard.

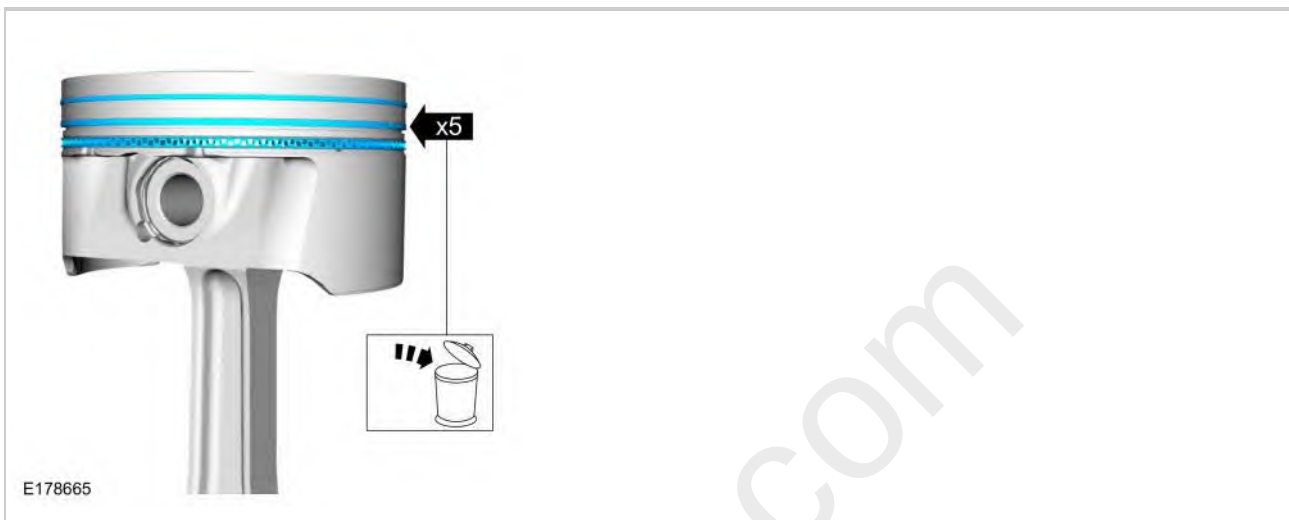

2.

Remove the piston pin retainers and discard.

Remove the piston pin.



3.



NOTE: If the piston and connecting rod are to be reinstalled, they must be