



Remove the headlamp assembly screws and position the headlamp assembly forward.

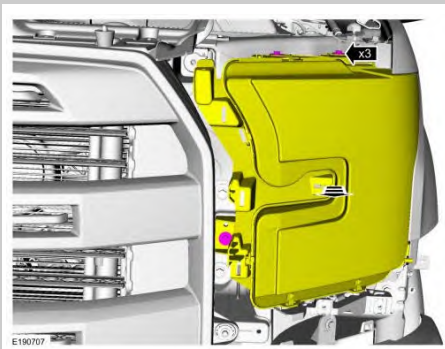

Vehicles with halogen headlamps

14.


Disconnect the electrical connectors and remove the headlamp assembly.

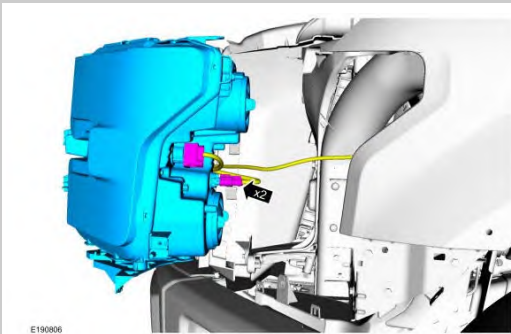

Vehicles with LED headlamps

15.

Disconnect the electrical connectors and remove the headlamp assembly.

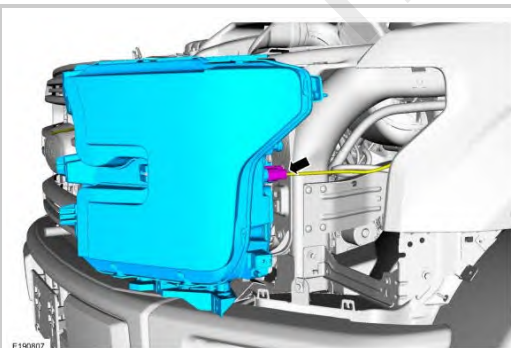

REMOVAL AND INSTALLATION > HEADLAMP ASSEMBLY > INSTALLATION

1.