

REMOVAL AND INSTALLATION > HEADLAMP BULB > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Adjust the headlamps. Refer to: Headlamp Adjustment .

REMOVAL AND INSTALLATION > HEADLAMP SWITCH > REMOVAL

1.




NOTE: Push button start vehicle shown, all others similar.

Lower the steering column opening trim panel.



2.

Release the tabs and remove the headlamp switch.

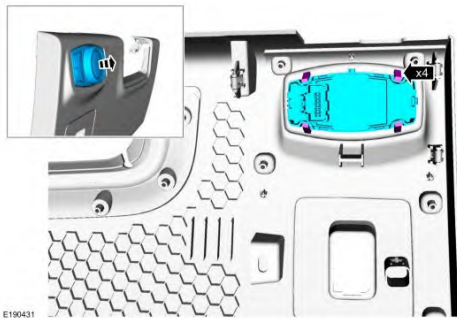

REMOVAL AND INSTALLATION > HEADLAMP SWITCH > INSTALLATION