


2.

Disconnect the light sensor electrical connector.

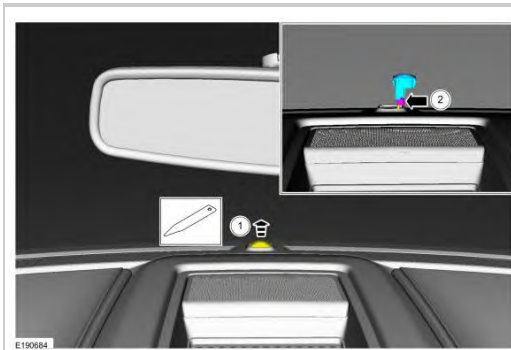

REMOVAL AND INSTALLATION > LIGHT SENSOR > INSTALLATION

1.


To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > REAR LAMP ASSEMBLY > REMOVAL

All vehicles

1.

Remove the screws and position the rear lamp assembly aside.

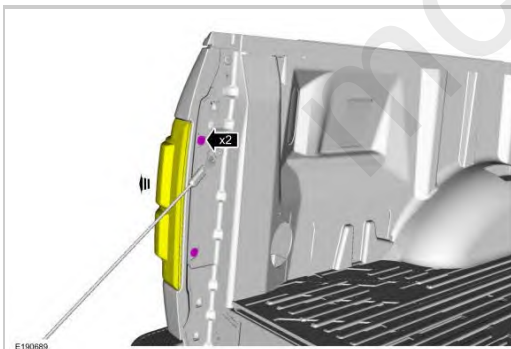

Vehicles with incandescent lamps

2.

Disconnect the rear lamp assembly electrical connectors.