

2.

Disconnect the light sensor electrical connector.



REMOVAL AND INSTALLATION > LIGHT SENSOR > INSTALLATION

1.


To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > REAR LAMP ASSEMBLY > REMOVAL

All vehicles

1.


Remove the screws and position the rear lamp assembly aside.

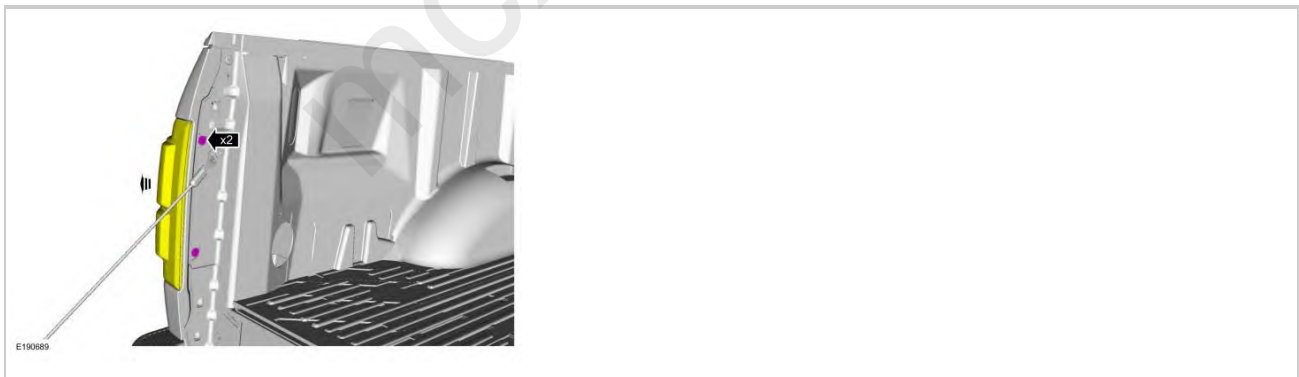

Vehicles with incandescent lamps

2.


Disconnect the rear lamp assembly electrical connectors.

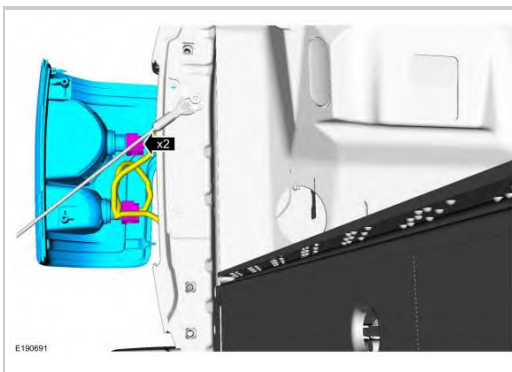

Vehicles with LED lamps

3.

Disconnect the rear lamp assembly electrical connector.

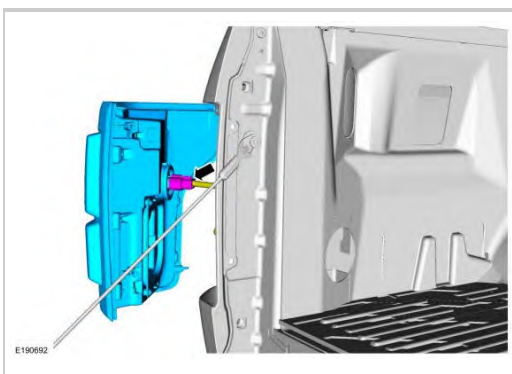

4.

Remove the rear lamp assembly. Refer to: Rear Lamp Assembly .

5.



NOTE: If equipped with SODL or SODR



NOTE: Carry out this step only if installing a new rear lamp assembly.

Remove the screws and position the SODL or SODR cover aside.