

Install the CAC outlet pipe. REFER to: CHARGE AIR COOLER (CAC) OUTLET PIPE .

9.

Install the air cleaner outlet pipe. REFER to: AIR CLEANER OUTLET PIPE .

10.

Fill and bleed the cooling system. REFER to: Cooling System Draining and Vacuum Filling .

## REMOVAL AND INSTALLATION > COOLING FAN MOTOR AND SHROUD

### Special Tool(s) / General Equipment

|              |
|--------------|
| Wooden Block |
|--------------|

## REMOVAL AND INSTALLATION > COOLING FAN MOTOR AND SHROUD > REMOVAL

1.

With the vehicle in NEUTRAL, position it on a hoist. REFER to: Jacking and Lifting - Overview .

2.

Remove the air cleaner outlet pipe. REFER to: AIR CLEANER OUTLET PIPE .

3.

Remove the air cleaner. REFER to: AIR CLEANER .

4.

Remove the CAC outlet pipe. REFER to: AIR CLEANER OUTLET PIPE RH .

5.


Remove the CAC outlet pipe. REFER to: CHARGE AIR COOLER (CAC) OUTLET PIPE

6.

Remove the bolts and position the degas bottle aside.


Torque

: 62 lb.in (7 Nm)

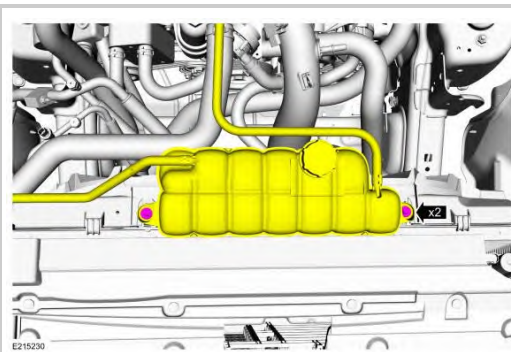


7.

Disconnect the cooling fan electrical connectors.

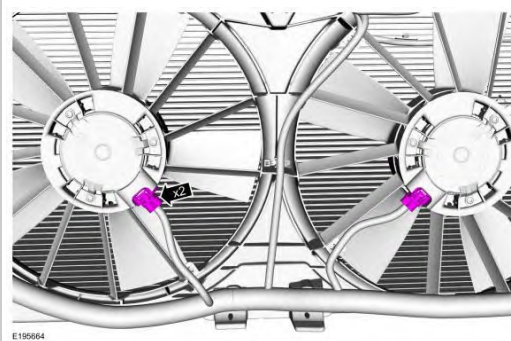


8.

Detach the pin-type retainers and harness retainer that secure the wiring harness to the cooling fan shroud.

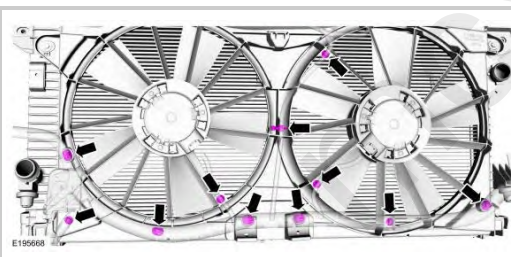

9.

Position the wiring harness aside.

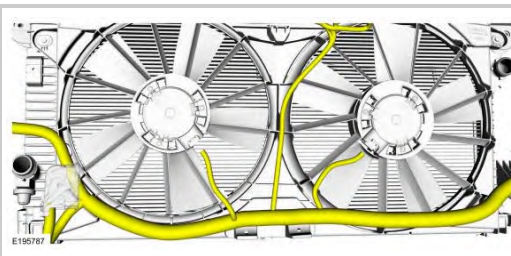

10.