

10.

Remove the retainers that secure the cooling fan motor and shroud.


Torque

: 62 lb.in (7 Nm)




11.

Lift the cooling fan motor and shroud upward and place wooden block to support it. Detach the pin-type retainers that secure the lower radiator shield to the cooling fan shroud.

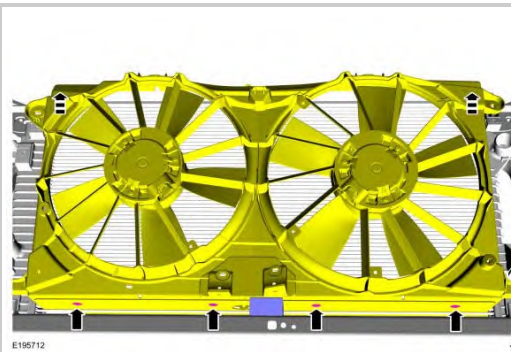

12.

Remove the cooling fan motor and shroud.

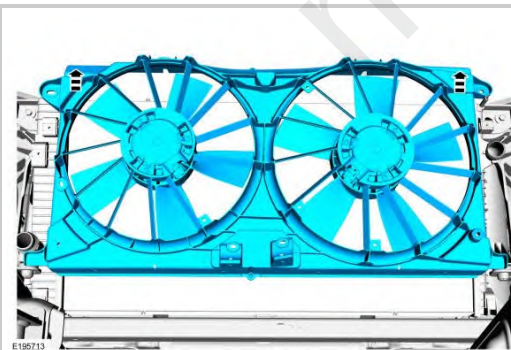

REMOVAL AND INSTALLATION > COOLING FAN MOTOR AND SHROUD > INSTALLATION

1.