


**DESCRIPTION AND OPERATION > ENGINE EMISSION CONTROL - COMPONENT
LOCATION > 3.5L ECOBOOST**

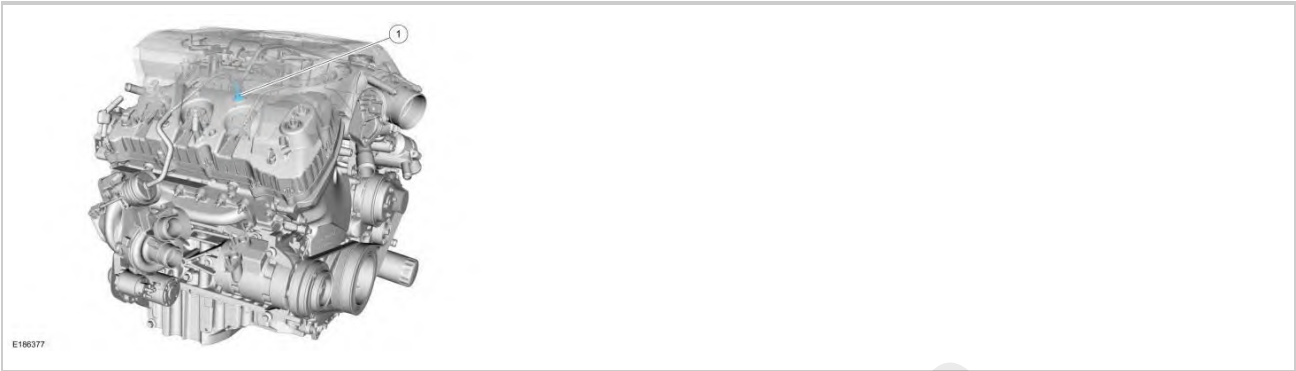

Item	Description
1	PCV valve

**DESCRIPTION AND OPERATION > ENGINE EMISSION CONTROL - SYSTEM
OPERATION AND COMPONENT DESCRIPTION > SYSTEM OPERATION**

For System Operation, Refer to ENGINE CONTROLS - DESCRIPTION & OPERATION (EXCEPT DIESEL & HYBRID) .

**DESCRIPTION AND OPERATION > ENGINE EMISSION CONTROL - SYSTEM
OPERATION AND COMPONENT DESCRIPTION > COMPONENT DESCRIPTION**

For Component Description, Refer to ENGINE CONTROLS - DESCRIPTION & OPERATION (EXCEPT DIESEL & HYBRID) .

DIAGNOSIS AND TESTING > ENGINE EMISSION CONTROL

Diagnostics in this service information assume a certain skill level and knowledge of Ford-specific diagnostic practices. For information about these, REFER to: Diagnostic Methods .

For a PCM/DTC, REFER to: ELECTRONIC ENGINE CONTROLS .

For driveability symptoms without a DTC, Refer to ENGINE CONTROLS - SYMPTOM CHARTS (EXCEPT DIESEL & HYBRID) .