



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the EVAP canister. Refer to: Evaporative Emission Canister .

2.

If necessary, remove the EVAP canister solenoid.



E193711

3.

Release the tabs and remove EVAP canister ventilation filter.



E193712

REMOVAL AND INSTALLATION > EVAPORATIVE EMISSION CANISTER VENTILATION FILTER > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > EVAPORATIVE EMISSION CANISTER VENT SOLENOID > REMOVAL