



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the EVAP canister. Refer to: Evaporative Emission Canister .

2.

Remove the EVAP canister solenoid.



E193711

REMOVAL AND INSTALLATION > EVAPORATIVE EMISSION CANISTER VENT SOLENOID > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL TANK PRESSURE SENSOR AND TUBE > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Position the vehicle on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Remove the fuel tank. Refer to: FUEL TANK .

3.