

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > EVAPORATIVE EMISSION CANISTER PURGE VALVE > REMOVAL

 **WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

 **WARNING:** Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the engine appearance cover.



2.

1.

Disconnect the EVAP canister purge valve electrical connector.

2.

Disconnect the EVAP canister purge valve quick connect couplings. Refer to: QUICK RELEASE COUPLING .

3.

Slide the EVAP canister purge valve rubber insulator off the bracket and remove and the