




6.

Check the exhaust system for leaks.

REMOVAL AND INSTALLATION > CATALYTIC CONVERTER RH > REMOVAL

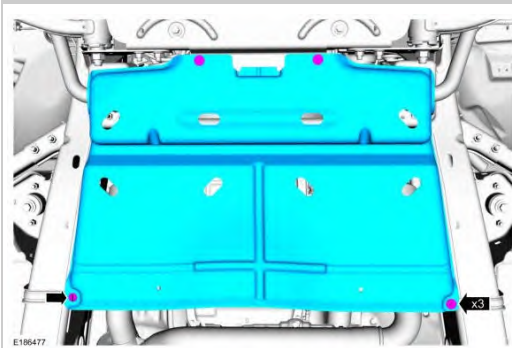

NOTE: If the catalytic converter is not being replaced, the HO2S and the catalyst monitor sensor do not need to be removed from the catalytic converter. Disconnecting the electrical connectors is still necessary.



NOTE: The exhaust Y-pipe dual catalytic converter is a 2-piece assembly. The LH and RH converters can be serviced separately as needed.



NOTE: Clean all exhaust connections before reassembly.

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Remove the LH catalytic converter. Refer to: Catalytic Converter LH .

3.

Remove the muffler inlet pipe. Refer to: Muffler Inlet Pipe .

4.

Remove the transmission support insulator. Refer to: Transmission Support Insulator .

5.

Disconnect the HO2S electrical connector and detach the wire clip.