

To install, reverse removal procedure.

2.

Check the exhaust system for leaks.

REMOVAL AND INSTALLATION > MUFFLER INLET PIPE > REMOVAL



NOTE: Muffler inlet pipes will vary in configuration with different wheelbases and powertrains. Typical application shown.



NOTE: Removal steps in this procedure may contain installation details.



NOTE: Clean all exhaust connections before reassembly.

1.


With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Loosen the clamp.

Torque

: 35 lb.ft (48 Nm)

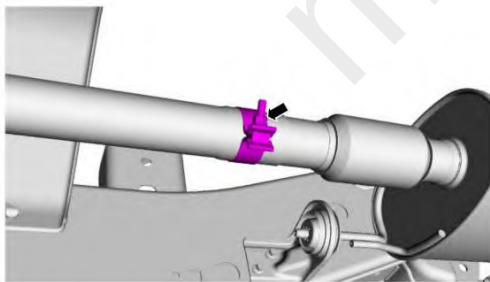

E104375

3.

During removal, the locator tab needs to be released out of the muffler inlet pipe.