


E194534

6.


Disconnect the catalyst monitor sensor electrical connector.

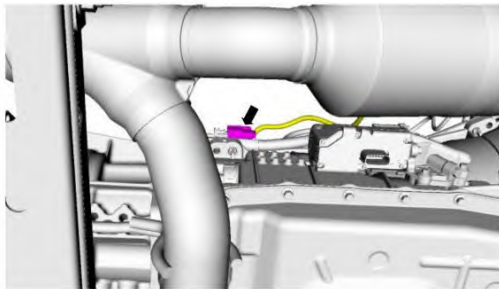

E194535

7.

Remove the RH catalytic converter nuts and discard. Remove the RH catalytic converter.

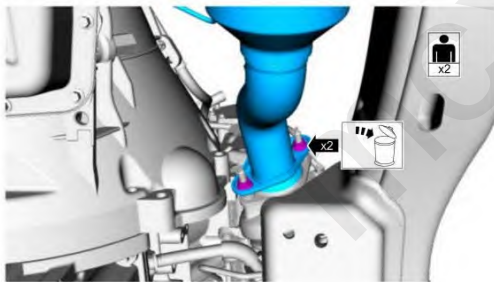


E194536

REMOVAL AND INSTALLATION > CATALYTIC CONVERTER RH > INSTALLATION

1.

 **NOTE:** Loosely install the new RH catalytic converter nuts. Do not tighten at this time.

Position the RH catalytic converter in the vehicle. Loosely install the RH catalytic converter nuts.

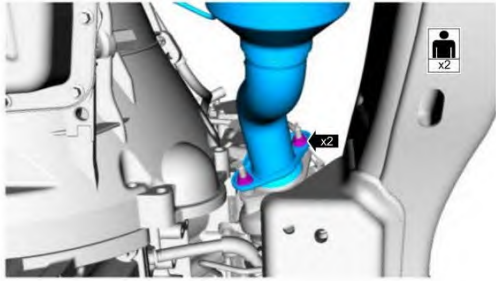

E194537

2.

Install the transmission support insulator. Refer to: Transmission Support Insulator .

3.




NOTE: Evenly tighten the RH catalytic converter nuts.

Tighten the RH catalytic converter nuts.

Torque

: 30 lb.ft (40 Nm)

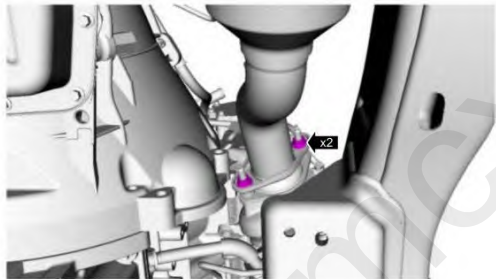

E225862

4.

Install the LH catalytic converter. Refer to: Catalytic Converter LH .

5.

Connect the catalyst monitor sensor electrical connector.