

32.

Check and top off the engine oil level as needed.

Material

: Motorcraft® SAE 5W-30 Premium Synthetic Blend Motor Oil / XO-5W30-QSP (WSS-M2C946-A)

33.

Start and check the exhaust system for leaks.

REMOVAL AND INSTALLATION > TURBOCHARGER RH

Materials

Name	Specification
Motorcraft® SAE 5W-30 Premium Synthetic Blend Motor Oil XO-5W30-QSP	WSS-M2C946-A
High Temperature Nickel Anti-Seize Lubricant XL-2	-
Motorcraft® Orange Concentrated Antifreeze/Coolant VC-3-B	WSS-M97B44-D

REMOVAL AND INSTALLATION > TURBOCHARGER RH > REMOVAL



NOTE: Whenever turbocharger air intake system components are removed, always cover open ports to protect from debris. It is important that no foreign material enter the system. The turbocharger compressor vanes are susceptible to damage from even small particles. All components should be inspected and cleaned, if necessary, prior to installation or reassembly.



NOTE: Some turbos are equipped with a heat shield, heat shields were deleted and some service turbos will not have mounting bosses for the heat shield.

1.

With the vehicle in NEUTRAL, position it on a hoist. REFER to: Jacking and Lifting - Overview .

2.

Remove the engine appearance cover retainers and then remove the engine appearance cover.