

Install the turbocharger RH. REFER to: Turbocharger RH .

REMOVAL AND INSTALLATION > TURBOCHARGER OIL SUPPLY TUBE LH

Materials

Name	Specification
Motorcraft® SAE 5W-30 Premium Synthetic Blend Motor OilXO-5W30-QSP	WSS-M2C946-A

REMOVAL AND INSTALLATION > TURBOCHARGER OIL SUPPLY TUBE LH > REMOVAL


 **NOTE:** Whenever turbocharger air intake system components are removed, always cover open ports to protect from debris. It is important that no foreign material enter the system. The turbocharger compressor vanes are susceptible to damage from even small particles. All components should be inspected and cleaned, if necessary, prior to installation or reassembly.

1.

Remove the turbocharger LH. REFER to: Turbocharger LH .

2.

Remove the lower turbocharger oil manifold assembly bolt and the turbocharger oil manifold assembly.

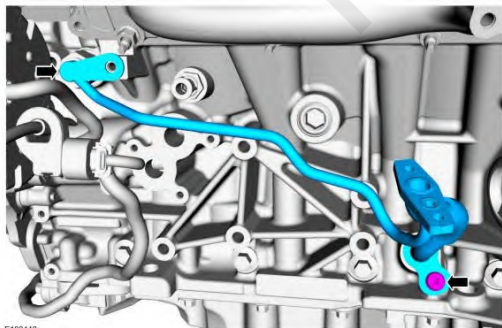

3.

Remove and discard the turbocharger oil manifold assembly O-ring seal and gasket.