

REMOVAL AND INSTALLATION > TURBOCHARGER OIL SUPPLY TUBE RH > REMOVAL



NOTE: Whenever turbocharger air intake system components are removed, always cover open ports to protect from debris. It is important that no foreign material enter the system. The turbocharger compressor vanes are susceptible to damage from even small particles. All components should be inspected and cleaned, if necessary, prior to installation or reassembly.

1.


Remove the turbocharger RH. REFER to: Turbocharger RH .

2.

Remove the starter motor. REFER to: STARTER MOTOR .

3.

Remove the lower turbocharger oil tube assembly bolt and the turbocharger oil tube assembly.

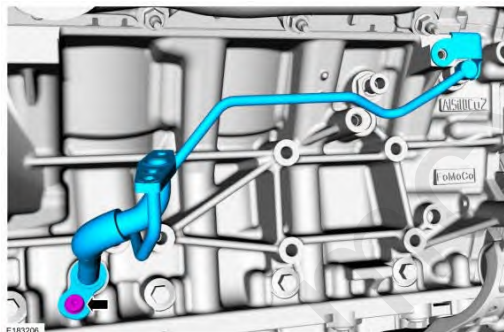

4.

Remove and discard the turbocharger oil tube assembly O-ring seal.

