


: 71 lb.in (8 Nm)

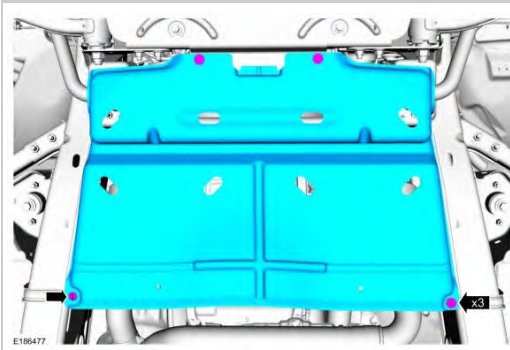

24.

Fill the cooling system. REFER to: COOLING SYSTEM DRAINING AND VACUUM FILLING .

25.

Remove the oil filler cap and install the engine appearance cover. Install the oil filler cap.



REMOVAL AND INSTALLATION > TURBOCHARGER RH

Materials

Name	Specification
High Temperature Nickel Anti-Seize Lubricant XL-2	-

REMOVAL AND INSTALLATION > TURBOCHARGER RH > REMOVAL



NOTE: Whenever turbocharger air intake system components are removed, always cover open ports to protect from debris. It is important that no foreign material enter the system. The turbocharger compressor vanes are susceptible to damage from even small particles. All components should be inspected and cleaned, if necessary, prior to installation or reassembly.