

6.



NOTE: The Fuel Pump (FP) control module electrical connector was previously disconnected to release the fuel system pressure and must be reconnected to test the fuel system pressure.

Reconnect the Fuel Pump (FP) control module electrical connector.

7.

Reconnect the battery ground cable. REFER to: Battery Disconnect and Connect .

8.



NOTE: Carry out a Key ON Engine OFF (KOEO) visual inspection for fuel leaks prior to completing the fuel system pressure test.

Test the fuel system pressure to make sure it is within the specified range. For additional information, refer to SPECIFICATIONS .

9.

After completion of the fuel system pressure test, disconnect the battery ground cable, open the drain valve on the Fuel Pressure Test Kit and release any residual fluid into an appropriate container. REFER to: Battery Disconnect and Connect .

10.

Remove the Fuel Pressure Test Kit by reversing the installation steps.

GENERAL PROCEDURES > FUEL SYSTEM PRESSURE RELEASE

Pressure release

1.

With the vehicle in NEUTRAL, position it on a hoist. REFER to: Jacking and Lifting - Overview .

2.



NOTE: The Fuel Pump Control Module is located on the frame rail above the fuel tank.

Disconnect the Fuel Pump Control Module electrical connector.