

 **NOTE:** Make sure the alignment tabs on the Fuel Pump and Sender Unit and the fuel tank meet prior to tightening the Fuel Pump and Sender Unit lock ring.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL TANK

Special Tool(s) / General Equipment



300-OTC1585AE Powertrain Lift

REMOVAL AND INSTALLATION > FUEL TANK > REMOVAL

 **NOTE:** Removal steps in this procedure may contain installation steps.

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.


Release the fuel system pressure. Refer to: FUEL SYSTEM PRESSURE RELEASE .

3.

Drain the fuel tank. Refer to: FUEL TANK DRAINING .

4.

If equipped, remove the nuts and the skid plate.

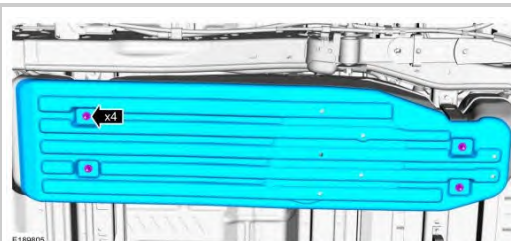

5.