

REMOVAL AND INSTALLATION > FUEL TANK > REMOVAL



NOTE: Removal steps in this procedure may contain installation steps.

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.


Release the fuel system pressure. Refer to: FUEL SYSTEM PRESSURE RELEASE .

3.

Drain the fuel tank. Refer to: FUEL TANK DRAINING .


4.

If equipped, remove the nuts and the skid plate.

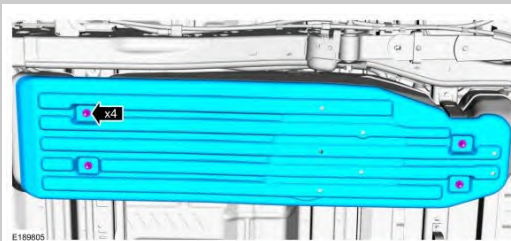

5.

Disconnect the fuel feed and vapor tube quick release couplings. Refer to: QUICK RELEASE COUPLING

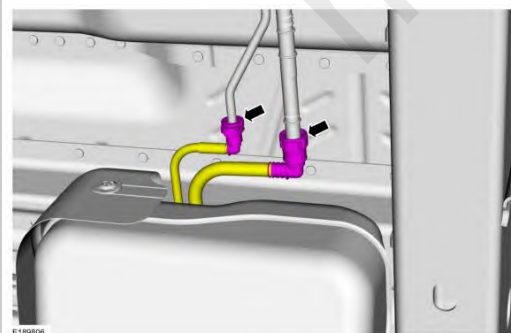

6.

Disconnect the fuel tank filler pipe vent tube quick release coupling. Refer to: QUICK RELEASE COUPLING .

Disconnect the electrical connectors and release the harness retainer clips.