


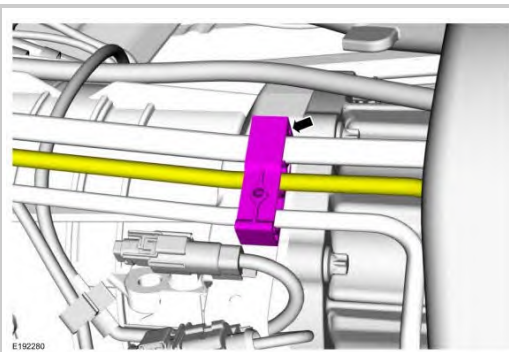


10.

Disconnect the front fuel supply line-to-fuel tank fuel supply line quick connect coupling.
Refer to: QUICK RELEASE COUPLING .

Release the retainer clips.

Remove the fuel feed line from the bottom of the vehicle.

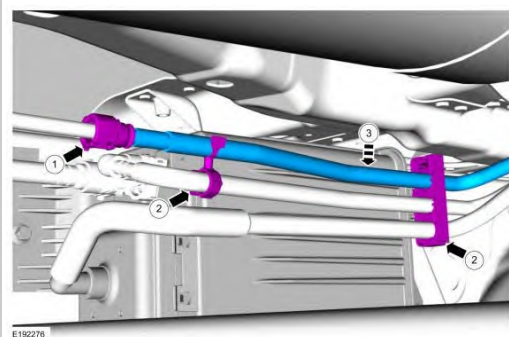

REMOVAL AND INSTALLATION > FUEL LINES > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL PUMP AND SENDER UNIT

Special Tool(s) / General Equipment

310-123



E80148

310-123 Locking Ring, Fuel Tank

TKIT-2004J-F

TKIT-2005U-LM