


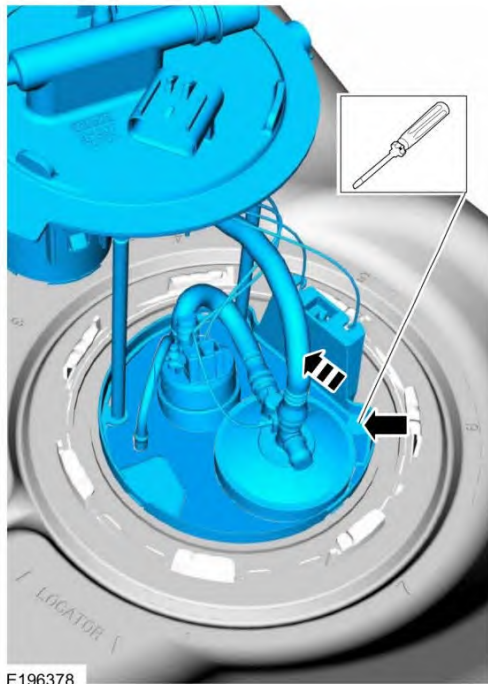

REMOVAL AND INSTALLATION > FUEL PUMP AND SENDER UNIT > INSTALLATION

1.



NOTE: Make sure to install a new Fuel Pump and Sender Unit O-ring seal.



NOTE: Make sure the alignment tabs on the Fuel Pump and Sender Unit and the fuel tank meet prior to tightening the Fuel Pump and Sender Unit lock ring.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL TANK

Special Tool(s) / General Equipment



300-OTC1585AE Powertrain Lift