

7.

Using a powertrain lift, support the fuel tank.

Use Special Service Tool: 300-OTC1585AE Powertrain Lift.


8.

Remove the bolts.

Torque

: 30 lb.ft (40 Nm)

Position aside the fuel tanks straps and remove the fuel tank.

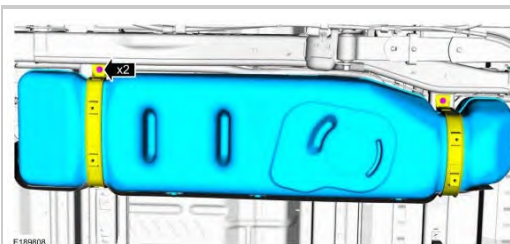

REMOVAL AND INSTALLATION > FUEL TANK > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL TANK FILLER PIPE > REMOVAL



NOTE: Removal steps in this procedure may contain installation steps.

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.


Disconnect the battery ground cable. Refer to: Battery Disconnect and Connect .

3.

Remove the rear driveshaft. Refer to: REAR DRIVESHAFT .


4.

Release the clamp and position the fuel filler pipe hose aside.

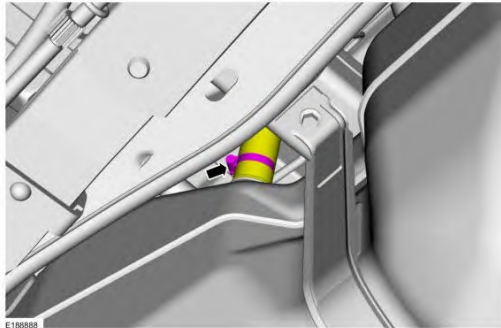

5.

Disconnect the fuel tank filler pipe vapor tube. Refer to: QUICK RELEASE COUPLING .

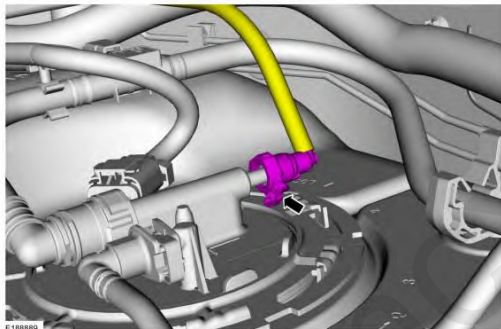

6.

Remove the bolt and the fuel tank filler pipe.

Torque

: 133 lb.in (15 Nm)

