

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Remove the air cleaner outlet pipe. Refer to: Air Cleaner Outlet Pipe .

3.




NOTE: The clamp can be accessed through the fender splash shield.

Loosen the clamp at the turbocharger inlet. Position aside the heater hose. Remove the air cleaner outlet pipe.

Torque

: 48 lb.in (5.4 Nm)

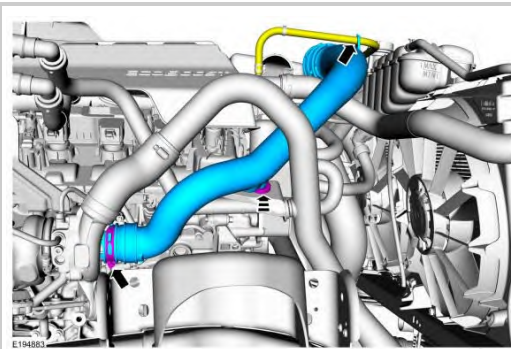

REMOVAL AND INSTALLATION > AIR CLEANER OUTLET PIPE RH > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > CHARGE AIR COOLER (CAC) > REMOVAL



NOTE: Whenever turbocharger air intake system components are removed, always cover open ports to protect from debris. It is important that no foreign material enter the system. The turbocharger compressor vanes are susceptible to damage even from small particles. Inspect and clean all components prior to installation or assembly.

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .