

REMOVAL AND INSTALLATION > CHARGE AIR COOLER (CAC) > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > CHARGE AIR COOLER (CAC) INTAKE PIPE > REMOVAL



NOTE: Whenever turbocharger air intake system components are removed, always cover open ports to protect from debris. It is important that no foreign material enter the system. The turbocharger compressor vanes are susceptible to damage even from small particles. Inspect and clean all components prior to installation or assembly.



NOTE: Removal steps in this procedure may contain installation details.

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

Charge air cooler (CAC) intake pipe - Left side

2.


Remove the LH air cleaner outlet pipe. Refer to: Air Cleaner Outlet Pipe LH .

3.

Loosen the clamp and position the CAC intake pipe.

Torque

: 48 lb.in (5.4 Nm)

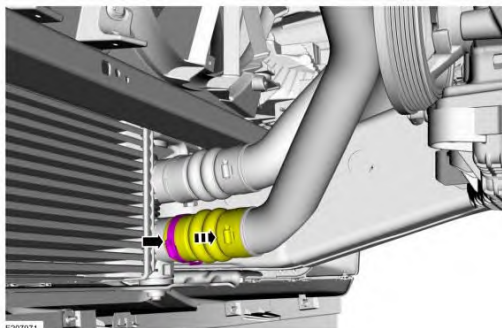

4.