

Yes	GO to AH6
No	* If there is an observable symptom, REFER to: Information and Entertainment System . See Symptom Chart: General Audio System.* If there is no observable symptom, the system is operating correctly at this time. The DTC may have been set due to high network traffic or an intermittent fault condition.

AH6 CHECK FOR CORRECT RCM (RESTRAINTS CONTROL MODULE) OPERATION

Ignition OFF.

Disconnect and inspect all the RCM connectors.

Repair:

Corrosion (clean module pins or install new connectors or terminals)

Damaged or bent pins (install new terminals or pins)

Pushed-out pins (install new pins as necessary)

Reconnect the RCM connectors. Make sure they seat and latch correctly.

Operate the system and determine if the concern is still present.

Is the concern still present?

Yes	CHECK OASIS for any applicable Technical Service Bulletins (TSBs). If a TSB exists for this concern, DISCONTINUE this test and FOLLOW the TSB instructions. If no Technical Service Bulletins (TSBs) address this concern, INSTALL a new RCM. REFER to: Restraints Control Module (RCM) .
No	The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.

DIAGNOSIS AND TESTING > INFORMATION AND ENTERTAINMENT SYSTEM > PINPOINT TESTS > PINPOINT TEST AI : U0155:00

Normal Operation and Fault Conditions

REFER to: Information and Entertainment System - System Operation and Component Description . See Network Message Chart.

DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
U0155:00	Lost Communication With IPC Control Module: No Sub Type	Set by the ACM, APIM, audio DSP module, FCIM, and GPSM