

Calibrate the touchscreen. Refer to: Touchscreen Calibration .

REMOVAL AND INSTALLATION > FRONT DOOR SPEAKER LH > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the front door trim panel. Refer to: Front Door Trim Panel .

2.

Remove the bolts and the door speaker.

Disconnect the electrical connector.

Torque

: 13 lb.in (1.5 Nm)



REMOVAL AND INSTALLATION > FRONT DOOR SPEAKER LH > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FRONT DOOR SPEAKER RH > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the front door trim panel. Refer to: Front Door Trim Panel .