

2.

Remove the bolts and the door speaker.

Disconnect the electrical connector.

Torque

: 13 lb.in (1.5 Nm)



REMOVAL AND INSTALLATION > FRONT DOOR SPEAKER RH > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > GLOBAL POSITIONING SYSTEM MODULE (GPSM)

Special Tool(s) / General Equipment

Interior Trim Remover

REMOVAL AND INSTALLATION > GLOBAL POSITIONING SYSTEM MODULE (GPSM) > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.



NOTE: If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.