


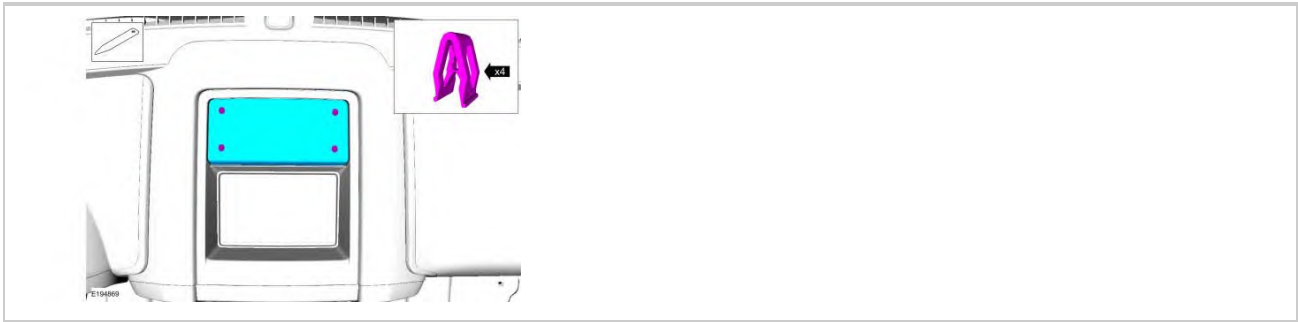


2.

Remove the bolts and the instrument panel speaker.

Disconnect the electrical connector.

Torque

: 22 lb.in (2.5 Nm)

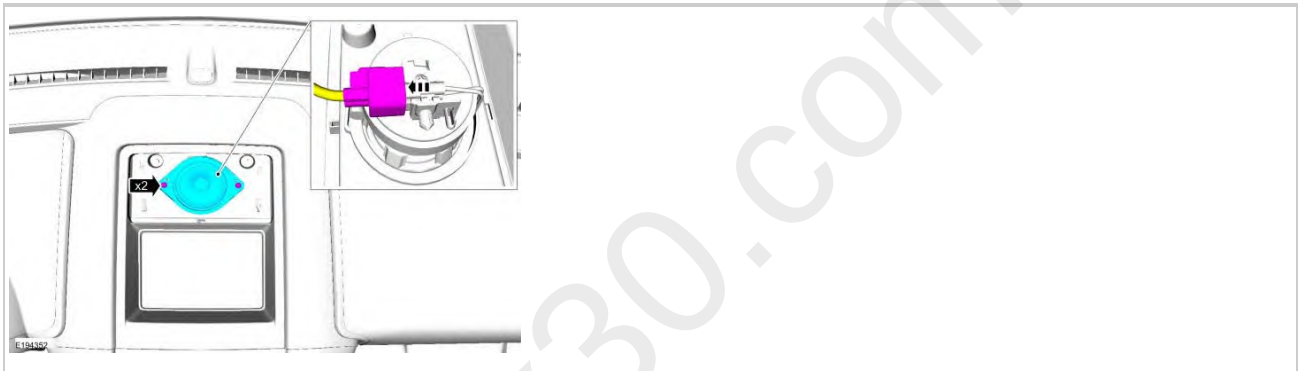

REMOVAL AND INSTALLATION > INSTRUMENT PANEL CENTER SPEAKER > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > MEDIA HUB

Special Tool(s) / General Equipment

Interior Trim Remover

REMOVAL AND INSTALLATION > MEDIA HUB > REMOVAL

Vehicles with floor console