

Ignition ON.

Using a diagnostic scan tool, retrieve all Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any lost communication Diagnostic Trouble Codes (DTCs) (U-codes) present in the FCDIM?

Yes	REFER to: Information and Entertainment System . See DTC Chart: FCDIM.
No	GO to X5

X5 CHECK FOR CORRECT FCDIM (FRONT CONTROL/DISPLAY INTERFACE MODULE) OPERATION

Ignition OFF.

Disconnect and inspect the FCDIM connector.

Repair:

Corrosion (clean module pins or install new connectors or terminals)

Damaged or bent pins (install new terminals or pins)

Pushed-out pins (install new pins as necessary)

Reconnect the FCDIM connector. Make sure it seats and latches correctly.

Operate the system and determine if the concern is still present.

Is the concern still present?

Yes	CHECK OASIS for any applicable Technical Service Bulletins (TSBs). If a TSB exists for this concern, DISCONTINUE this test and FOLLOW the TSB instructions. If no Technical Service Bulletins (TSBs) address this concern, INSTALL a new FCDIM. REFER to: Front Control/Display Interface Module (FCDIM) .
No	The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.

DIAGNOSIS AND TESTING > INFORMATION AND ENTERTAINMENT SYSTEM > PINPOINT TESTS > PINPOINT TEST Y : THE CD (COMPACT DISC) PLAYER IS INOPERATIVE OR DOES NOT OPERATE CORRECTLY - IF EQUIPPED

Normal Operation and Fault Conditions

REFER to: Information and Entertainment System - System Operation and Component Description .
See: ACM.