


4.

Remove the bolts and the FCIM.

Disconnect the electrical connectors.

Torque

: 21 lb.in (2.4 Nm)

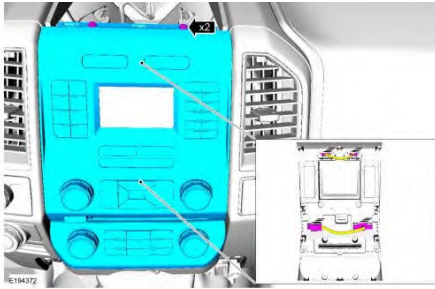

REMOVAL AND INSTALLATION > FRONT CONTROLS INTERFACE MODULE (FCIM) > INSTALLATION

1.

To install, reverse the removal procedure.

2.



NOTE: This step is only necessary if replacing the component.

Using a diagnostic scan tool, complete the PMI process for the FCIM following the on-screen instructions.

REMOVAL AND INSTALLATION > FRONT DOOR SPEAKER LH > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the front door trim panel. Refer to: Front Door Trim Panel .

2.

Remove the bolts and the door speaker.